



McWade Monitoring Systems
Telephone: +44 (0)161 483 0754
Email: info@mcwade-monitoring.co.uk

Special Preamplifier Type NLA460



Example of a heavily screened preamplifier for use in electrically noisy locations



Designed for use close to an RF transmitter. The preamplifier was further housed in an electron beam welded and independently grounded outer enclosure.

Please see also Page 2



McWade Monitoring Systems
Telephone: +44 (0)161 483 0754
Email: info@mcwade-monitoring.co.uk

Sub-Contract Electron Beam Welding

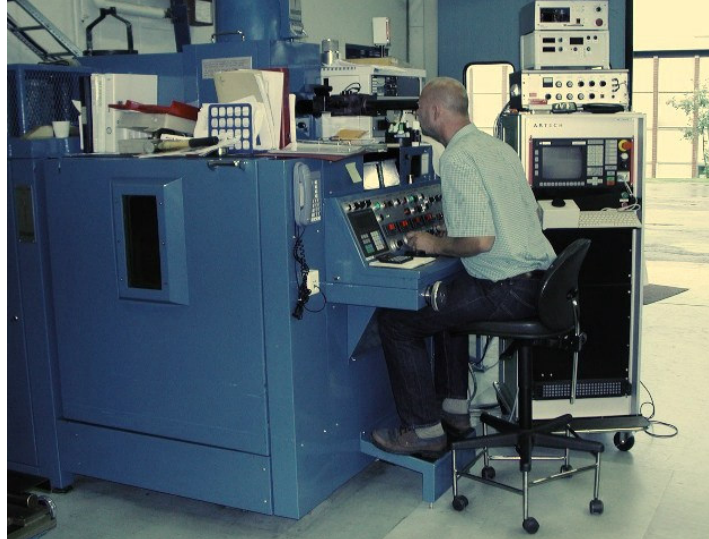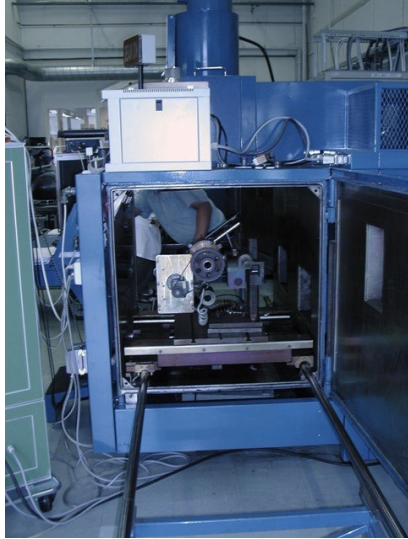

Electron Beam welding of outer enclosure



Example of completed weld



Helium leak detection after welding